


● Location of modules
A16B-2202-0850, 0851

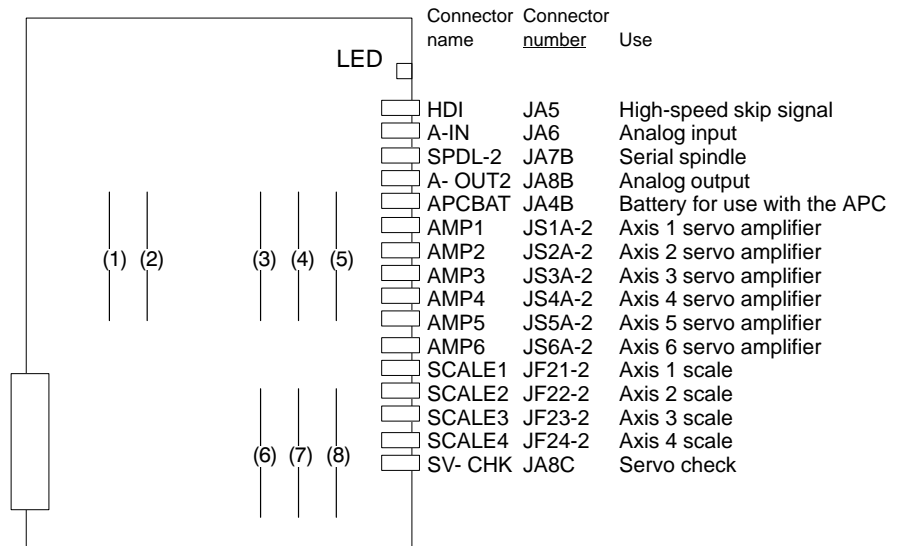

No.	Name	Specifications	Function	Display of system configuration screen
(1)	FROM module	A20B-2902-0081	2nd path macro	FLASH ROM MODULE:4MB
		A20B-2902-0082		FLASH ROM MODULE:2MB
(2)	SRAM module	A20B-2902-0350	CNC system RAM	ADDITIONAL SRAM: 256KB
		A20B-2902-0351		ADDITIONAL SRAM: 768KB
		A20B-2902-0352		ADDITIONAL SRAM: 2.25MB
(3)	DRAM module	A20B-2901-0940	CNC system RAM	DRAM:6MB
		A20B-2901-0941		DRAM:4MB
		A20B-2901-0942		DRAM:2MB
(4)	Spindle module	A20B-2901-0984	Spindle control	SERIAL SPINDLE LSI
		A20B-2901-0985		ANALOG SPINDLE LSI
		A20B-2901-0986		SERIAL SPINDLE LSI
(5)	HAM module	A20B-2900-0280	Analog I/O+HDI	H-SKIP DI & ANALOG I/O: HDI+ANALOG
		A20B-2900-0281	HDI	H-SKIP DI & ANALOG I/O: HDI
(8)	Servo module	A20B-2902-0060	Servo control 5th or 6th axis	SERVO 5/6 AXIS
		A20B-2902-0061		
(7)	Servo module	A20B-2902-0060	Servo control 3rd or 4th axis	SERVO 3/4 AXIS
		A20B-2902-0061		
(8)	Servo module	A20B-2902-0060	Servo control 1st or 2nd axis	SERVO 1/2 AXIS
		A20B-2902-0061		